


Change A Two-Way Rod To A One-Way Rod

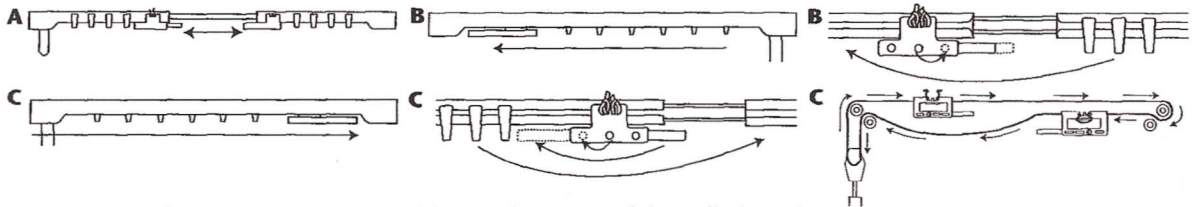

- A. Lay rod face down. Pull sections apart. Free cord from right master; slide it off; discard.
- B. Cord and stack right. Move master arm in remaining master to right screw hole; slide off. Move all slides to outside (large) rod section. Replace master; rejoin rod.
- C. Cord and stack left. Untie cord on left; remove cord guide. Restrung cord; re-knot. Untie cord on right and pull down between wheels on right. Add guide; restring and re-knot. Change screw in master, reverse arm; slide off. Move all slides to inside (small) rod section. Replace master; rejoin rod.